


Automatic transmission, 1.8L gas engine

Relay locations

Position of relays and multi-pin connector wiring, see also "Component Locations" section.

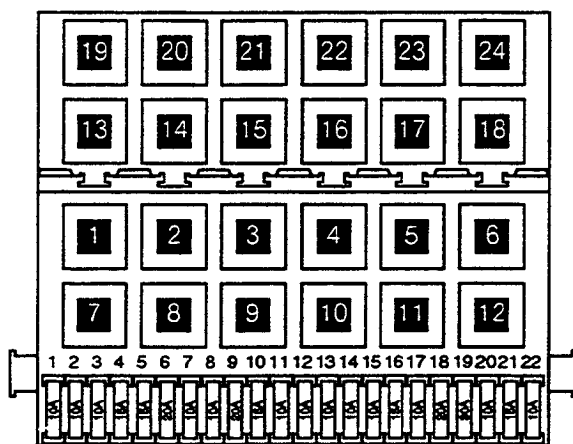

- 3 — Engine Control Module (ECM)
Power Supply Relay (30, 109, 288)
- 12 — Fuel Pump Relay (67, 80, 167)
- 14 — Park/Neutral Position (PNP) Relay (150)


Note:


Number in parentheses indicates production control number stamped on relay housing.

97-3000

Fuse colors


- 30A - green
- 25A - white
- 20A - yellow
- 15A - blue
- 10A - red

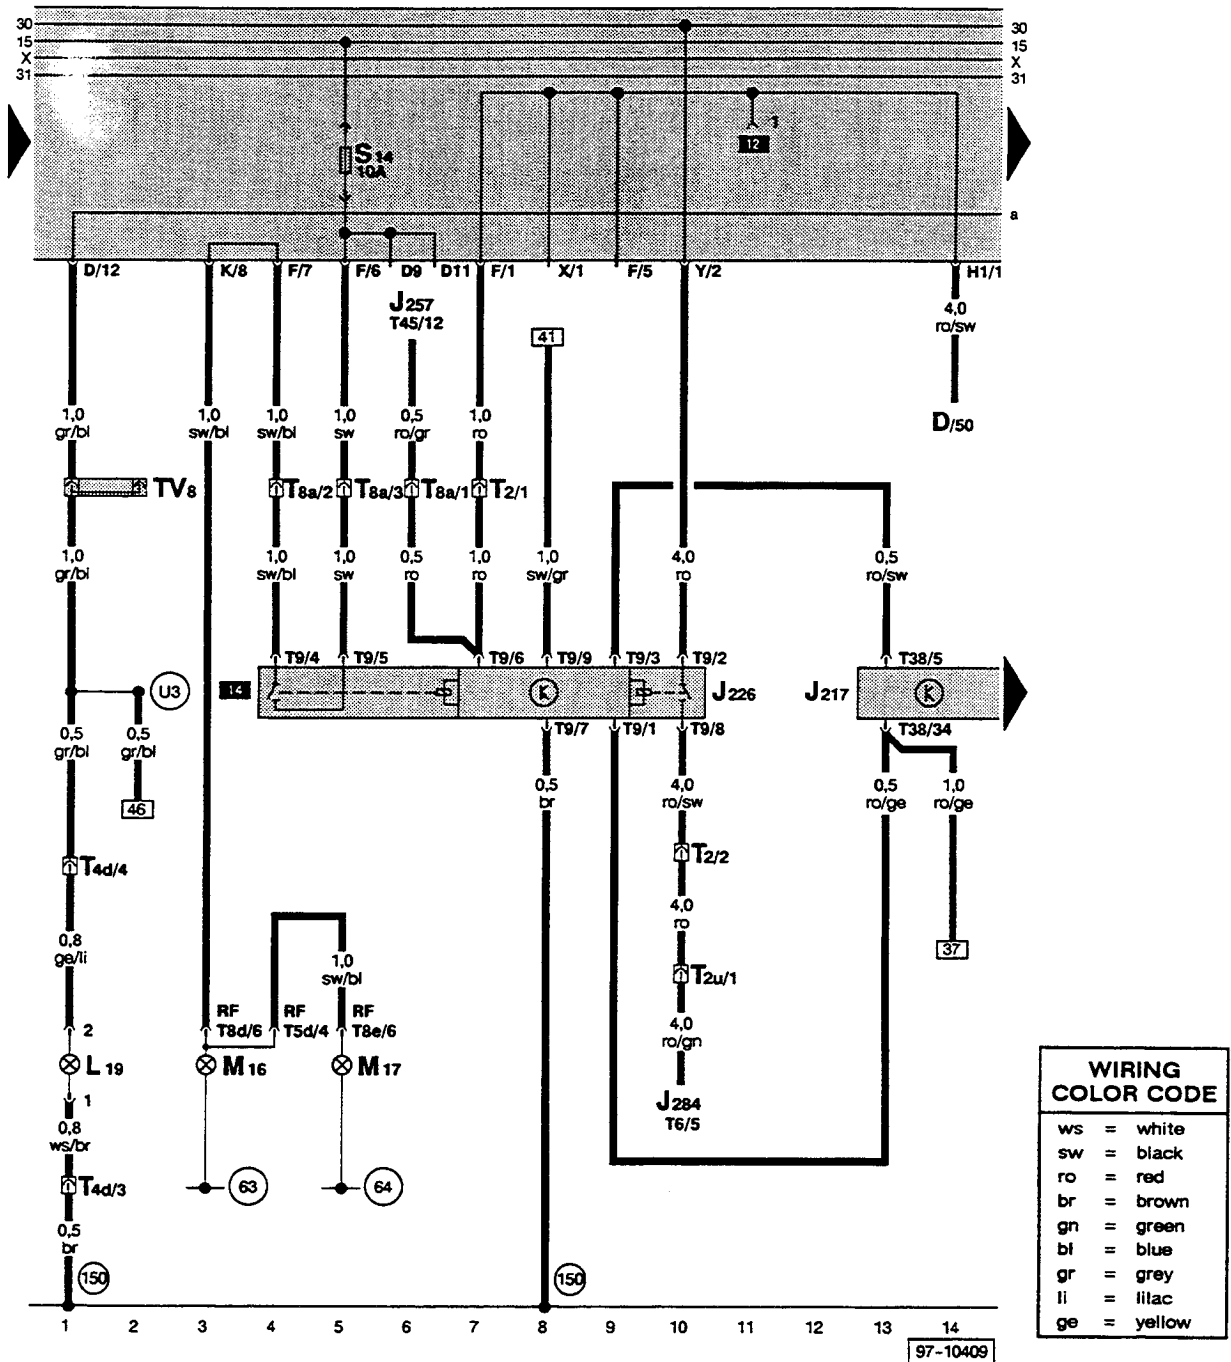

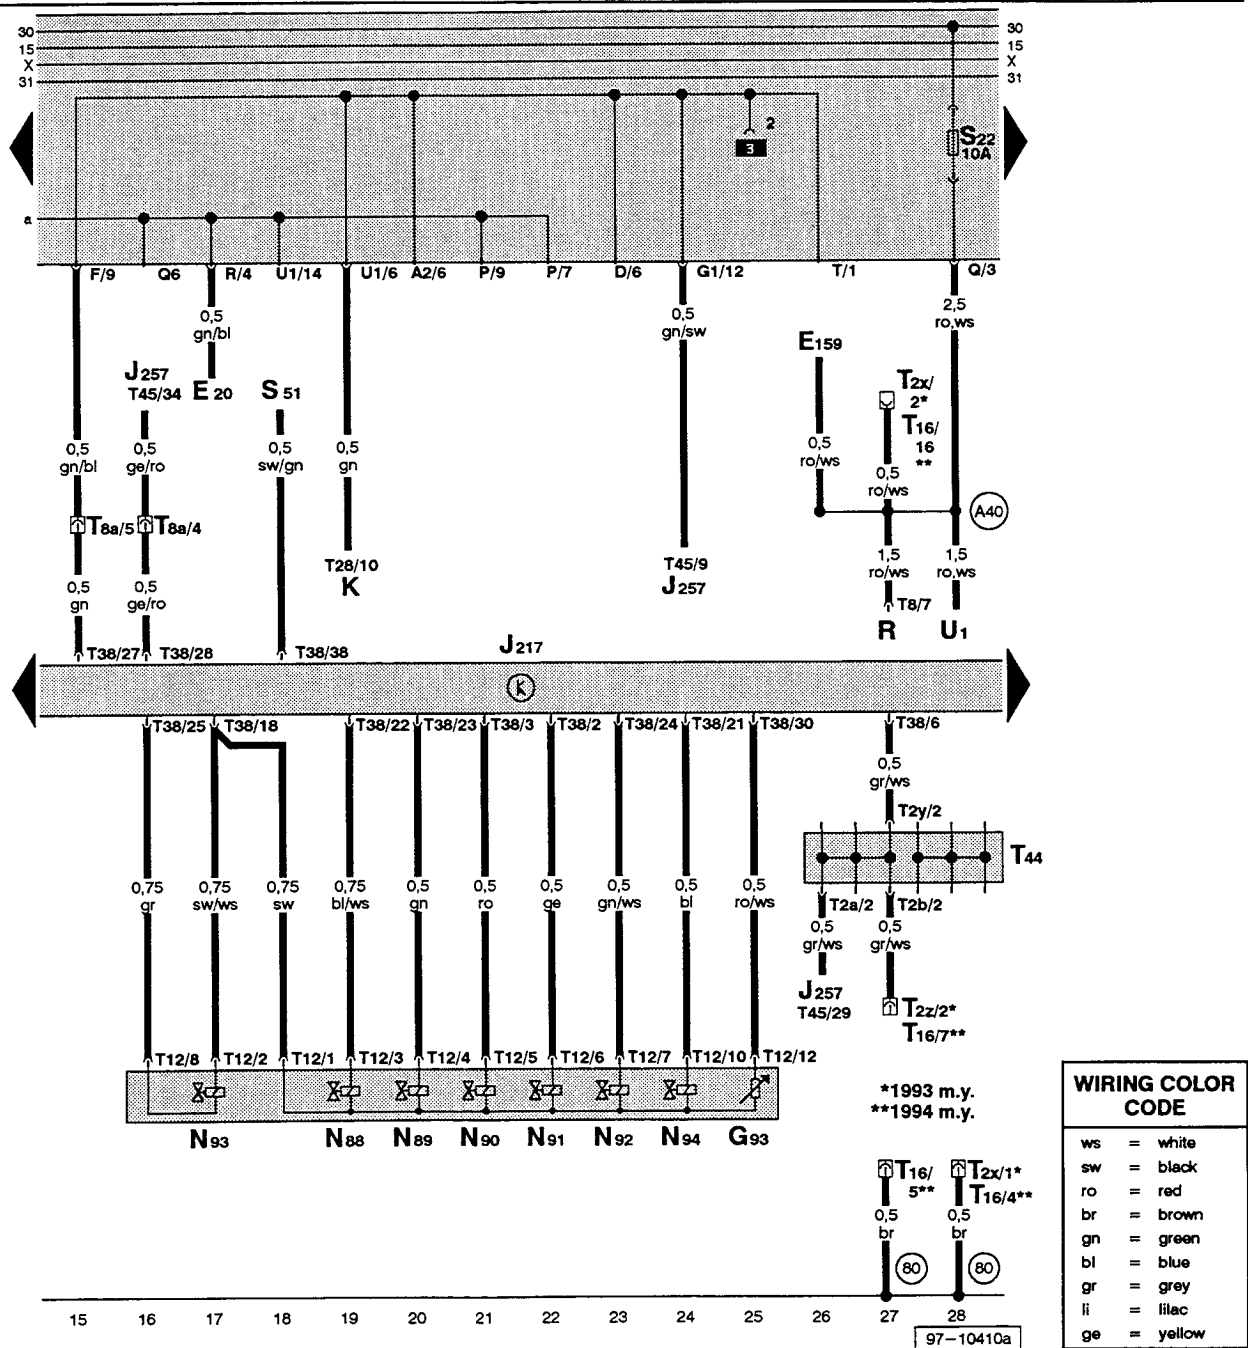

- E20 - Instrument Panel Light Dimmer Switch
- E159 - Luggage Compartment Release Switch
- G93 - Transmission Fluid Temperature Sensor
- J217 - Transmission Control Module (TCM)
- J257 - Mono-Motronic Engine Control Module
- K - Instrument Cluster
- N88 - Solenoid Valve 1
- N89 - Solenoid Valve 2
- N90 - Solenoid Valve 3
- N91 - Solenoid Valve 4
- N92 - Solenoid Valve 5
- N93 - Solenoid Valve 6
- N94 - Solenoid Valve 7
- R - Radio
- S51 - Fuse
- U1 - Cigarette Lighter
- T2a - Connector, Double, on junction connector (T44) above fuse/relay panel

- T2b - Connector, Double, on junction connector (T44) above fuse/relay panel
- T2x - Data Link Connector (DLC), behind center of dash panel
- T2y - Connector, Double, on junction connector (T44) above fuse/relay panel
- T2z - Data Link Connector (DLC), behind center of dash panel
- T8 - Connector, 8 Pin, on radio
- T8a - Connector, 8 Pin, behind fuse/relay panel
- T12 - Connector, 12 Pin, on transmission
- T16 - Data Link Connector (DLC), behind center of dash panel
- T28 - Connector, 28 Pin, instrument cluster
- T38 - Connector, 38 Pin, below right front seat, on Transmission Control Module (TCM)
- T44 - Junction Box for On Board Diagnostic, above fuse/relay panel
- T45 - Connector, 45 Pin, on Mono-Motronic Engine Control Module (ECM)
- (80) - Ground connection -1-, in instrument panel wiring harness
- (A40) - Plus connection (30), in instrument panel wiring harness

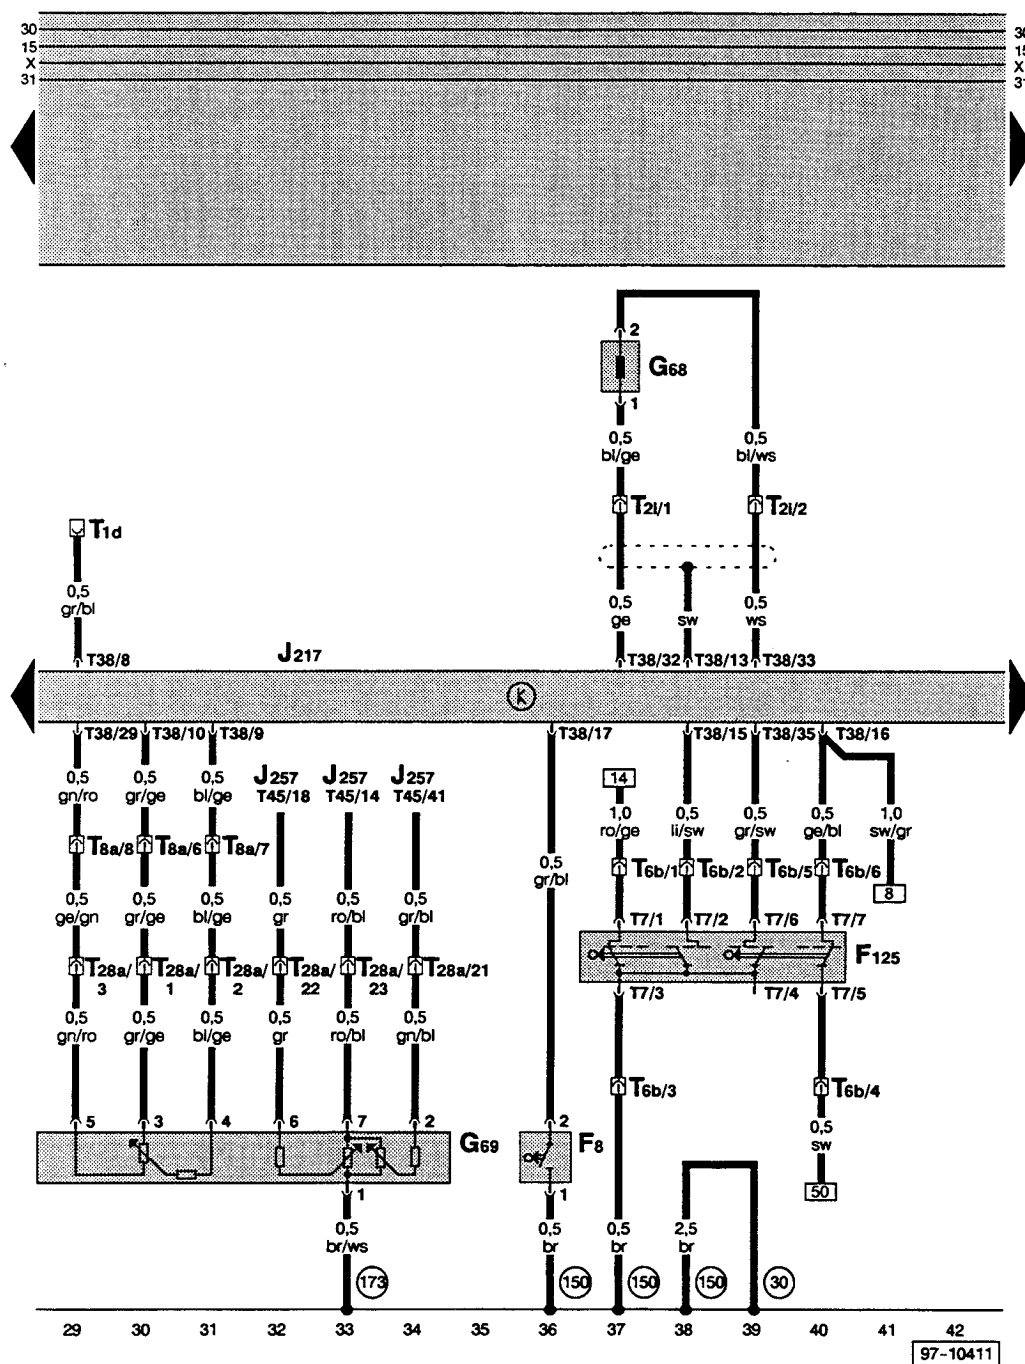

F8 - Kick Down Switch
 F125 - Multi-Function Transmission Range (TR) Switch
 G68 - Vehicle Speed Sensor (VSS)
 G69 - Throttle Position (TP) Sensor
 J217 - Transmission Control Module (TCM)
 J257 - Mono-Motronic Engine Control Module
 T1d - Connector, Single, behind fuse/relay panel
 T2i - Connector, Double, below battery
 T6b - Connector, 6 Pin, below battery
 T7 - Connector, 7 Pin, on transmission
 T8a - Connector, 8 Pin, behind fuse/relay panel
 T28a - Connector, 28 Pin, left side of engine, near distributor

T38 - Connector, 38 Pin, below right front seat, on Transmission Control Module (TCM)
 T45 - Connector, 45 Pin, on Mono-Motronic Engine Control Module (ECM)
 (30) - Ground connection - beside fuse/relay panel
 (150) - Ground connection, in automatic transmission wiring harness
 (173) - Ground connection - 1-, in Mono-Motronic Throttle Body Fuel Injection (TBI) wiring harness

