


Automatic transmission, 2.8L gas engine (Jetta GLX only)

Relay locations

Position of relays and multi-pin connector wiring, see also "Component Locations" section.

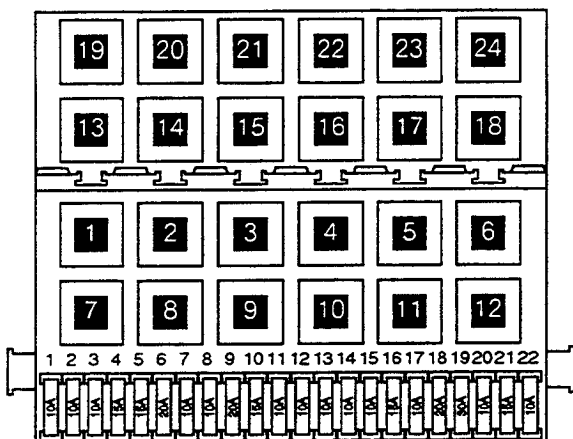

- 3** — Engine control Module (ECM)
Power Supply relay (30, 109, 288)
- 12** — Fuel Pump Relay (67, 80, 167)
- 14** — Park/Neutral Position (PNP) Relay (150)


Note:


Number in parentheses indicates production control number stamped on relay housing.


97-3000


Fuse colors

- 30A — green
- 25A — white
- 20A — yellow
- 15A — blue
- 10A — red

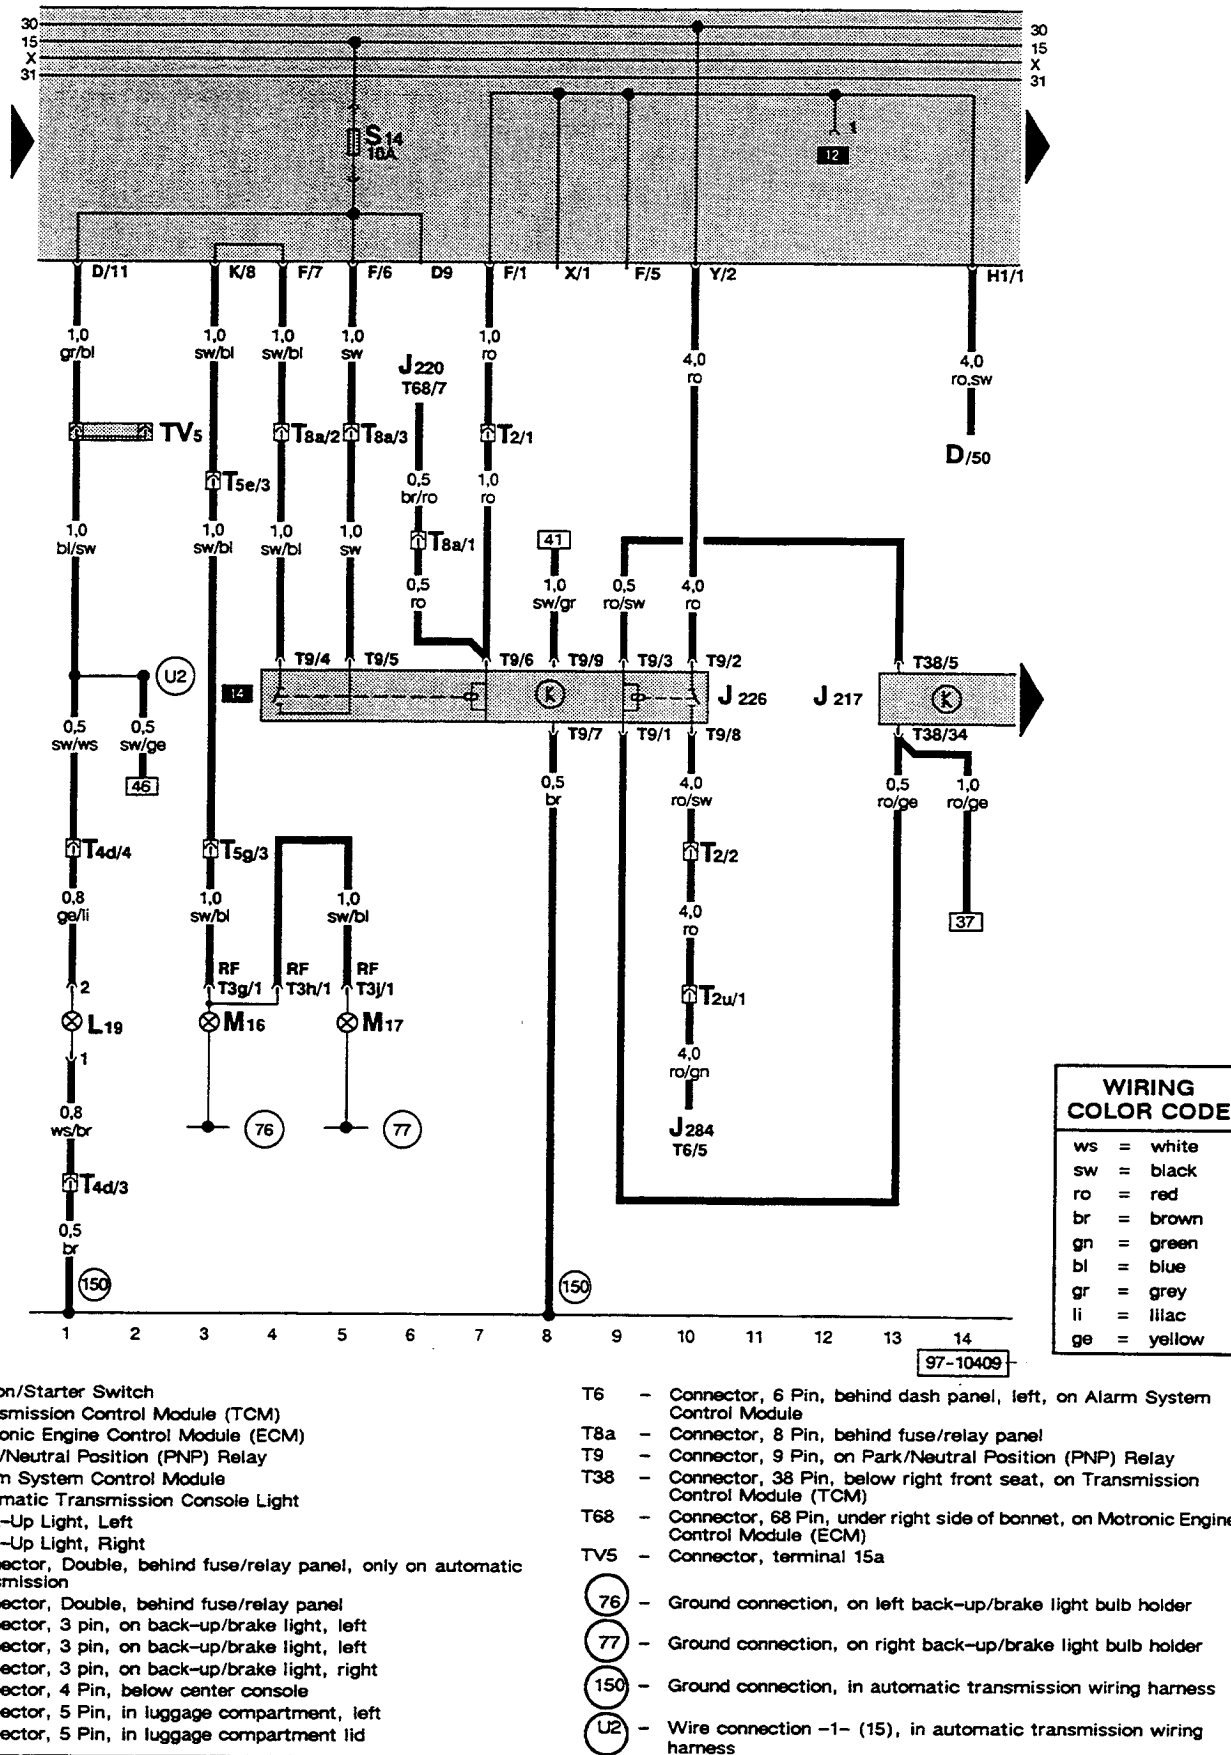

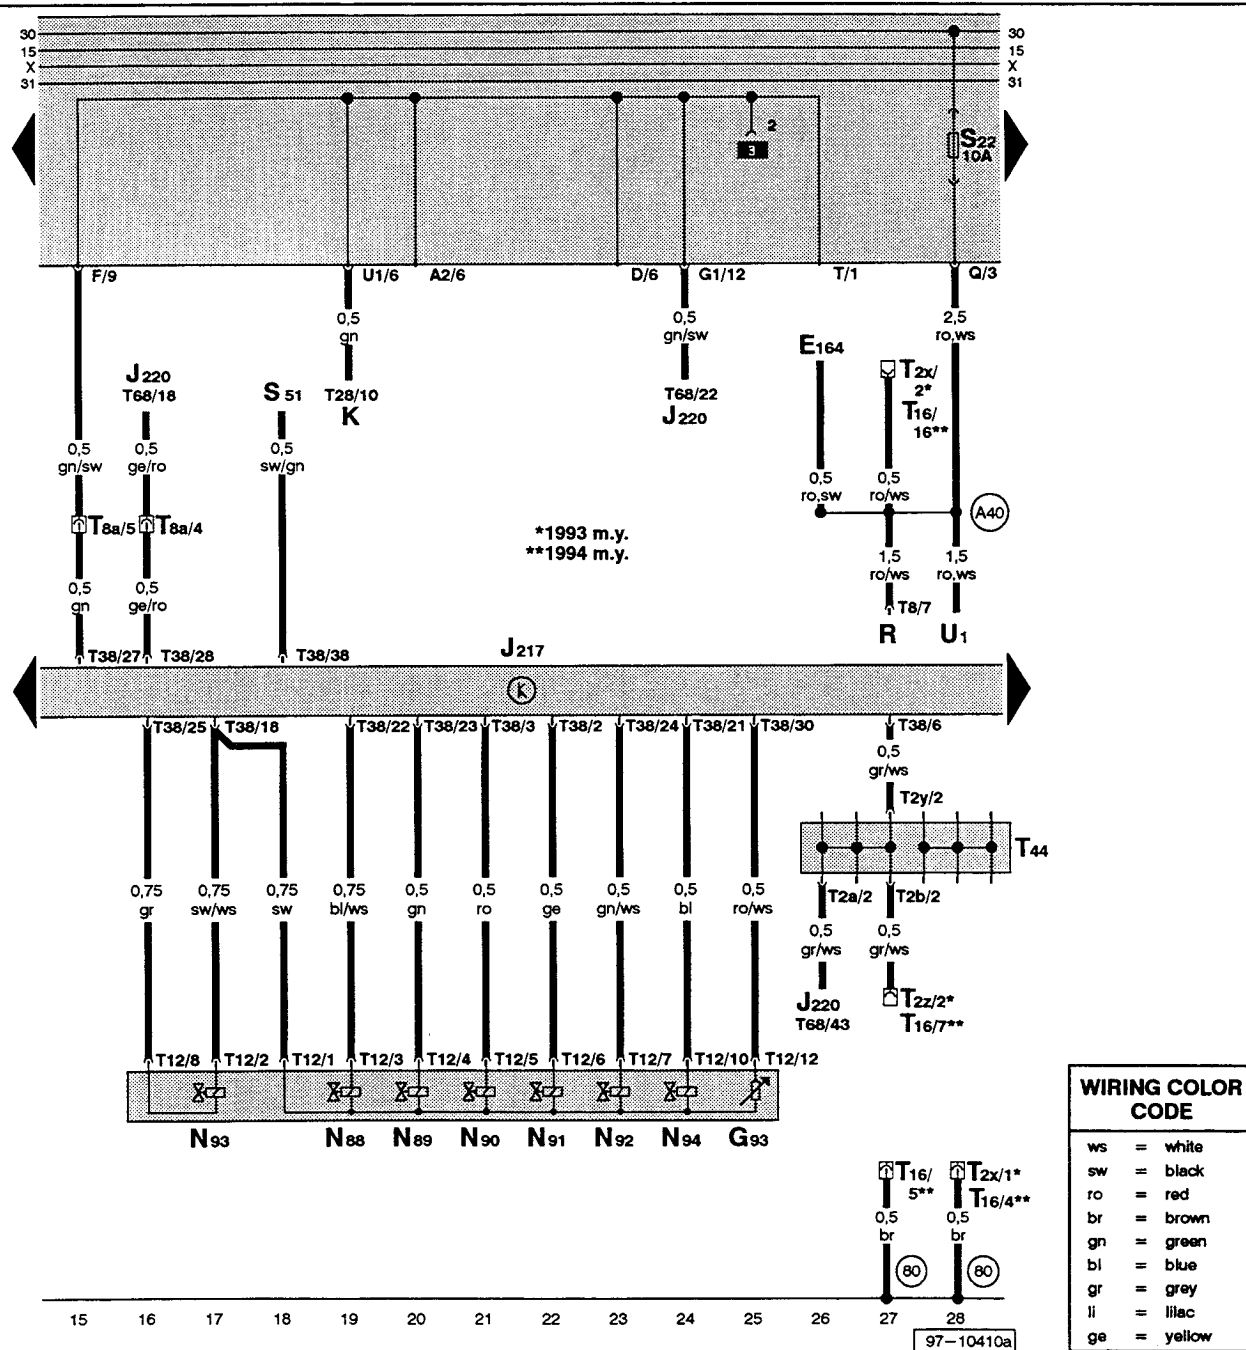

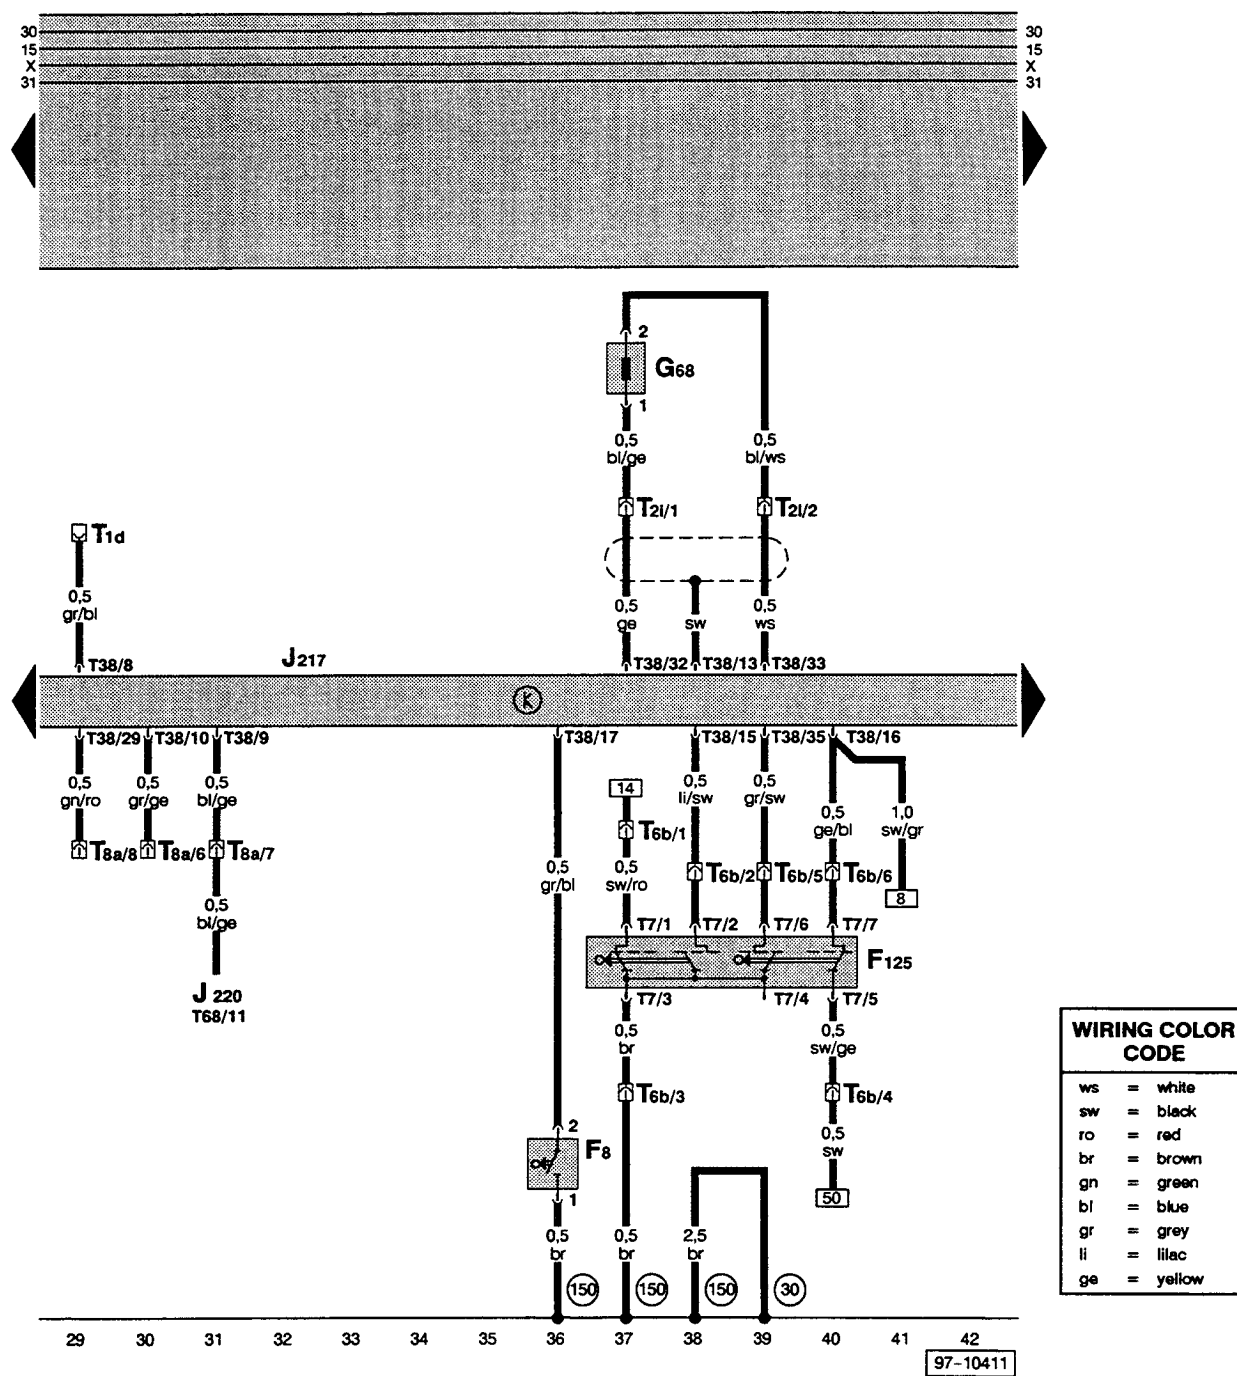

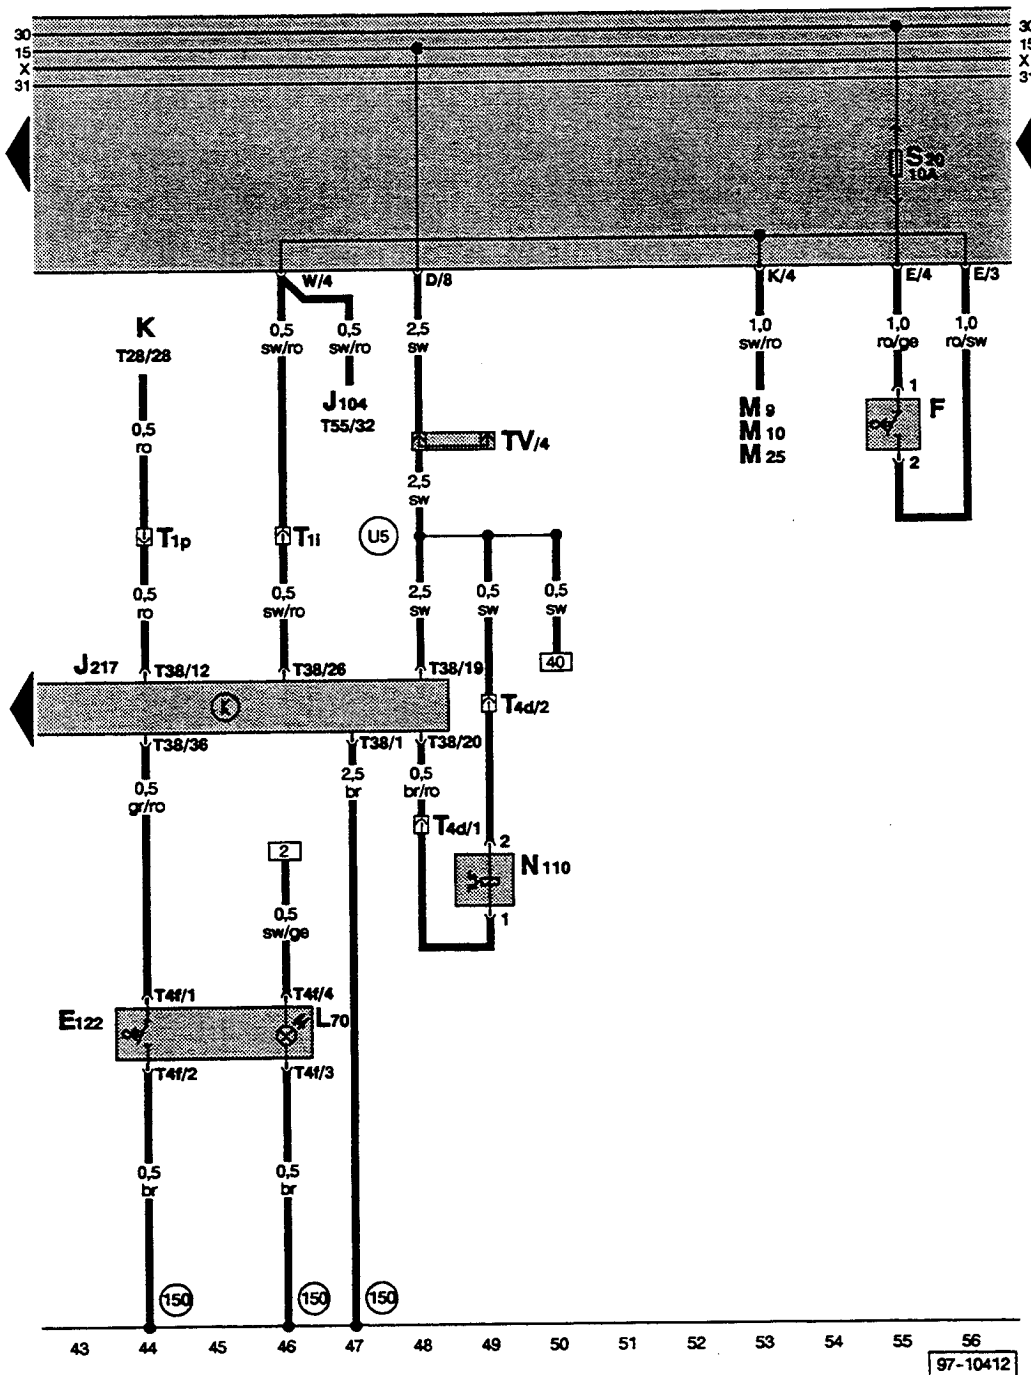

E122 - Transmission Range (TR) Program Switch
 F - Brake Light Switch
 J104 - ABS Control Module (w/EDL)
 J217 - Transmission Control Module (TCM)
 K - Instrument Cluster
 L70 - Program Switch Illumination
 M9 - Brake Light, Left
 M10 - Brake Light, Right
 M25 - High-Mount Brake Light
 N110 - Shift Lock Solenoid
 T1i - Connector, Single, behind fuse/relay panel
 T1p - Connector, Single, behind fuse/relay panel
 T4d - Connector, 4 Pin, below center console

T4f - Connector, 4 Pin, on Transmission Range (TR) Program Switch
 T28 - Connector, 28 Pin, on instrument cluster
 T38 - Connector, 38 Pin, below right front seat, on Transmission Co
 T55 - Connector, 55 pins, on ABS Control Module
 TV4 - Connector, terminal 15

(150) - Ground connection, in automatic transmission wiring harness
 (U5) - Wire connection -2- (15), in automatic transmission wiring harness
 (W1) - Plus connection (54), in rear wiring harness